


D-14205

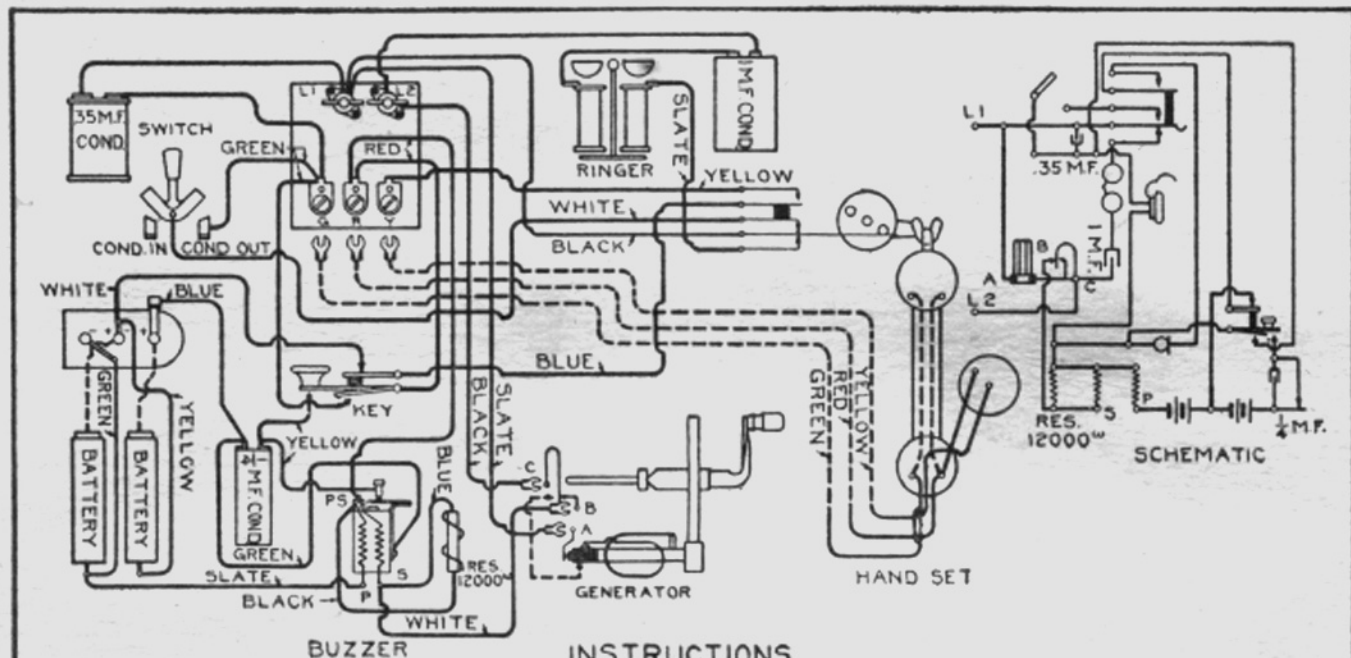

THIS TELEPHONE IS INTENDED FOR UNIVERSAL USE IN CONNECTION WITH TELEPHONE, BOTH MAGNETO AND COMMON BATTERY, TELEGRAPH AND BUZZER LINES. THE SMALL KNIFE SWITCH SHOULD REMAIN CLOSED AT ALL TIMES EXCEPT WHEN TELEPHONE IS USED ON TELEGRAPH OR SIMILAR LINE WHERE IT IS UNDESIRABLE TO SHUNT THE LINE BATTERY CURRENT. TO USE AS A COMMON BATTERY TELEPHONE, REMOVE HAND SET FROM HOOK AND CALL SWITCHBOARD IN USUAL WAY. UNLESS KNIFE SWITCH IS CLOSED, SWITCHBOARD OPERATOR CAN BE HEARD BUT CANNOT BE CALLED.

WHEN USED AS A MAGNETO TELEPHONE, SWITCHBOARD OR OTHER STATIONS MAY BE CALLED BY MEANS OF THE HAND GENERATOR. BUZZER CALLS MAY BE MADE OR BUZZER SIGNALS SENT OUT BY MEANS OF THE SENDING KEY ON TOP OF THE TELEPHONE. CARE SHOULD BE EXERCISED TO SEE THAT THIS KEY IS NOT DEPRESSED WHEN TALKING ON SHORT LOW RESISTANCE LINES ON ACCOUNT OF THE UNPLEASANT EFFECT AT THE OTHER STATION. THE BATTERIES IN THIS TELEPHONE ARE SMALL AND WILL REQUIRE REPLACEMENT AT SHORT INTERVALS, ESPECIALLY THE UNIT USED ON THE TRANSMITTER. THE TELEPHONE SHOULD NEVER BE CARRIED OUT WITHOUT FIRST TESTING THE BATTERIES.