Instruction Manual.

1. PRODUCT FEATURE.

- Image can be displayed quadrant or full screen.
- VCR can be connected to the machine to record or playback.
- Free of image shake or distortion when switching from channel to channel.
- EIA:25 Frames / Second, CCIR:30 Frames / Second
- OSD allows users to setup the device as desired.
- Date/Time and Title display available.

2. DESCRIPTION OF CONTROL BUTTONS

2.1 Front panel.

ESC	PLAY	PIP	ZOOM					
Ô	0	0	0	0	0	0	0	
\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	()	()	
MENU	FREEZE	AUTO	QUAD	1	Ţ	+	-	

Functions of Buttons

When each button is pressed, the corresponding LED above the button will be ON.

- 1. Press MENU button to enter SETUP MENU. This button can also be used as CONFIRM and EXIT.
- 2. Press FREEZE button to freeze the picture or display pictures from the VCR.
- 3. Press button **AUTO** to get the sequential displays of channel 1, channel 2, channel 3, channel 4, and Quad respectively and proceed in cycle. PIP function (Picture In Picture) can also be achieved by pressing the same button.
- 4. Press **QUAD** to display in quad mode. And 2X zoom function can also be achieved by pressing the same button.
- 5. Press button 🗄 to get full screen display for Channel 1. This button can also be used to move the cursor up/left while setting the menu.
- 6. Press button 🗄 to get full screen display for Channel 2. This button can also be used to move the cursor down/right while setting the menu.
- 7. Press button 🖬 to get full screen display for Channel 3. This button can also be used to increase the setup value or move the cursor left while setting the menu.
- 8. Press button 🖬 to get full screen display for Channel 4. This button can also be used to decrease the setup value or move cursor in right direction while setting the menu.