


PANZER BULLDOZER/SNOWPLOW BLADE

MODEL 10AC4

MOUNTING AND OPERATING INSTRUCTIONS


PARTS LIST

10AC4-1	BLADE ASSY.	10AC4-10	MOUNTING ROD
10AC4-2	BLADE TIP	10AC4-11	MTG. ROD COTTER PIN
10AC4-3	BLADE PIVOT BOLT	10AC4-12	MTG. ROD CLIP PIN
10AC4-4	BLADE PIVOT NUT	10AC4-13	PIVOT ARM LINK
10AC4-5	BLADE ANGLE PIN	10AC4-14	PIVOT ARM BOLT
10AC4-6	SKID	10AC4-15	PIVOT ARM NUT
10AC4-7	SKID BOLT	10AC4-16	LIFT LINK
10AC4-8	BEAM ASSY.	10AC4-17	BLADE TIP BOLT
10AC4-9	PIVOT ARM ASSY.	10AC4-18	BLADE TIP NUT
10AC4-19		BLADE TIP LOCKWASHER	

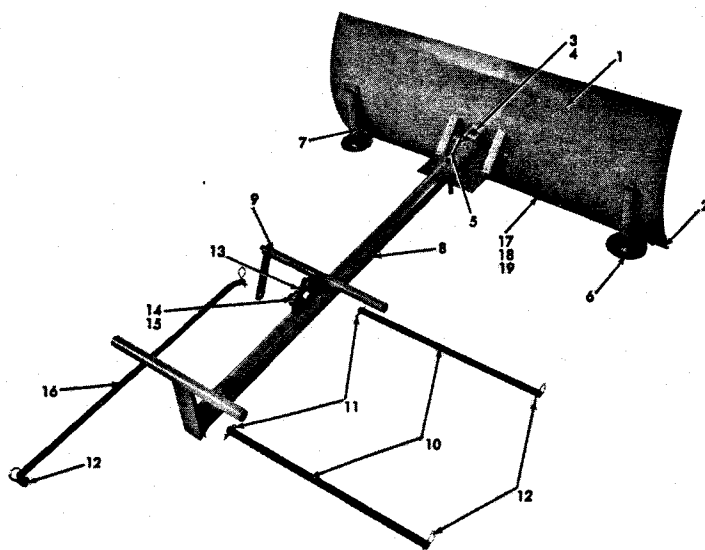

TO MOUNT

1. Slide beam assembly under tractor until tube at end of beam assembly lines up with holes in tractor frame just behind foot rest rod. Insert one of the mounting rods and secure with clip pin.
2. Line up tube of pivot arm assembly with holes in tractor frame just in front of motor plate. Insert remaining mounting rod and secure with clip pin.
3. Attach pivot arm link to pivot arm assembly with pivot arm bolt and secure with pivot arm nut.
4. Insert lift link in hole in pivot arm and lowest hole in lift handle. Secure with clip pins.
5. Insert skids in skid tubes and tighten skid bolt.
6. Place blade so that hole in forward end of beam assembly lines up with hole on plate in center of blade. Insert blade pivot bolt and secure with blade pivot nut.
7. Insert blade angle pin thru hole in beam assembly and appropriate hole in plate.

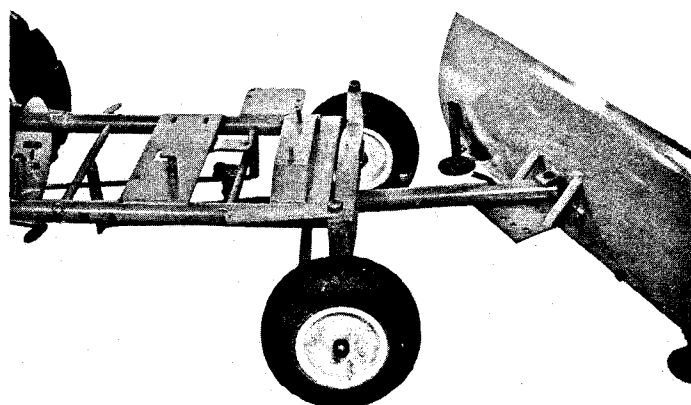

TO OPERATE

1. To lift blade, move lift handle forward.
2. To hold blade in position off ground, move lift handle forward until blade is raised and release lift trip into notch of lift quadrant.
3. To apply pressure to ground, move lift handle back.
4. To angle blade, pull out blade angle pin, move blade in desired direction until holes line up and replace blade angle pin.
5. To adjust skid height, loosen skid bolts, slide skid up or down as desired, tighten skid bolts.
6. When blade tip wears, remove blade tip bolts, reverse blade tip, and replace blade tip bolts.
7. If additional weight is desired on front of tractor, it is recommended that the Model 4AC5 Front Rack be used.

NUMBER CALLED OUT IN PICTURES IS THE NUMBER APPEARING AFTER THE DASH (-) IN THE COMPLETE PART NUMBER AS IT APPEARS IN PARTS LIST.

WHEN ORDERING REPLACEMENT PARTS, BE SURE TO SHOW COMPLETE PART NUMBER AND PART NAME AS SHOWN IN PICTURES AND PARTS LIST.