



Drill Press Wood Working Table

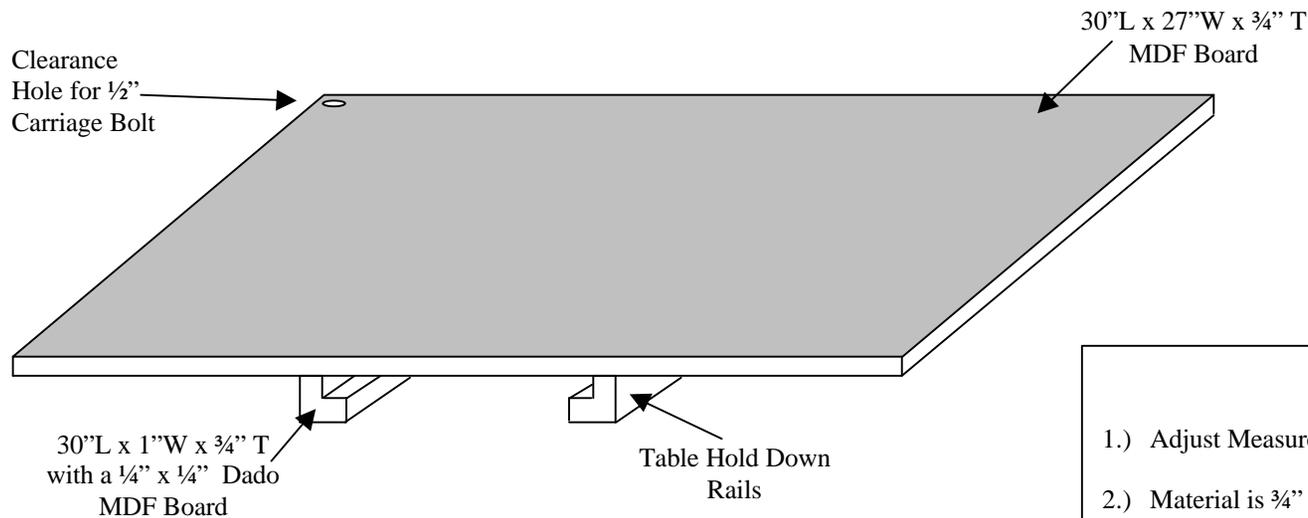

TABLE

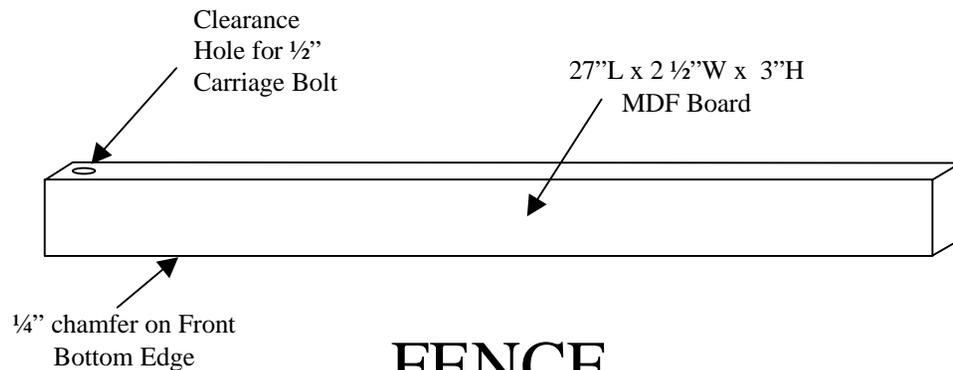

FENCE

DIRECTIONS

- 1.) Adjust Measurements to fit your Drill Press Table
- 2.) Material is 3/4" MDF (Medium Density Fiber Board)
- 3.) Cut two pieces of 3/4" MDF and glue them together for the Fence. Make sure that edges are perpendicular. Cut a 1/4" chamfer on the front bottom edge of fence as a sawdust "relief".
- 4.) Cut Dados in Table Hold Down Rails (Drill Press Table should slide smoothly in and out of rails). Use your Drill Press Table to line them up Square on the bottom of the wood table. Use glue and 3/4" drywall screws to secure.
- 5.) Position fence along the back edge of TableTop and drill a clearance hole for a 1/2" Carriage bolt through Fence and Table.
- 6.) Install a 1/2" x 4 1/2" Carriage bolt from the bottom of the Table through the fence. Top it off with one washer and a wing nut.

USE AT YOUR OWN RISK, THIS DRAWING IS FOR DISCUSSION PURPOSES ONLY

Drill Press Wood Working Table

