


WARN® WINCH

REPLACEMENT ASSEMBLIES PARTS LIST

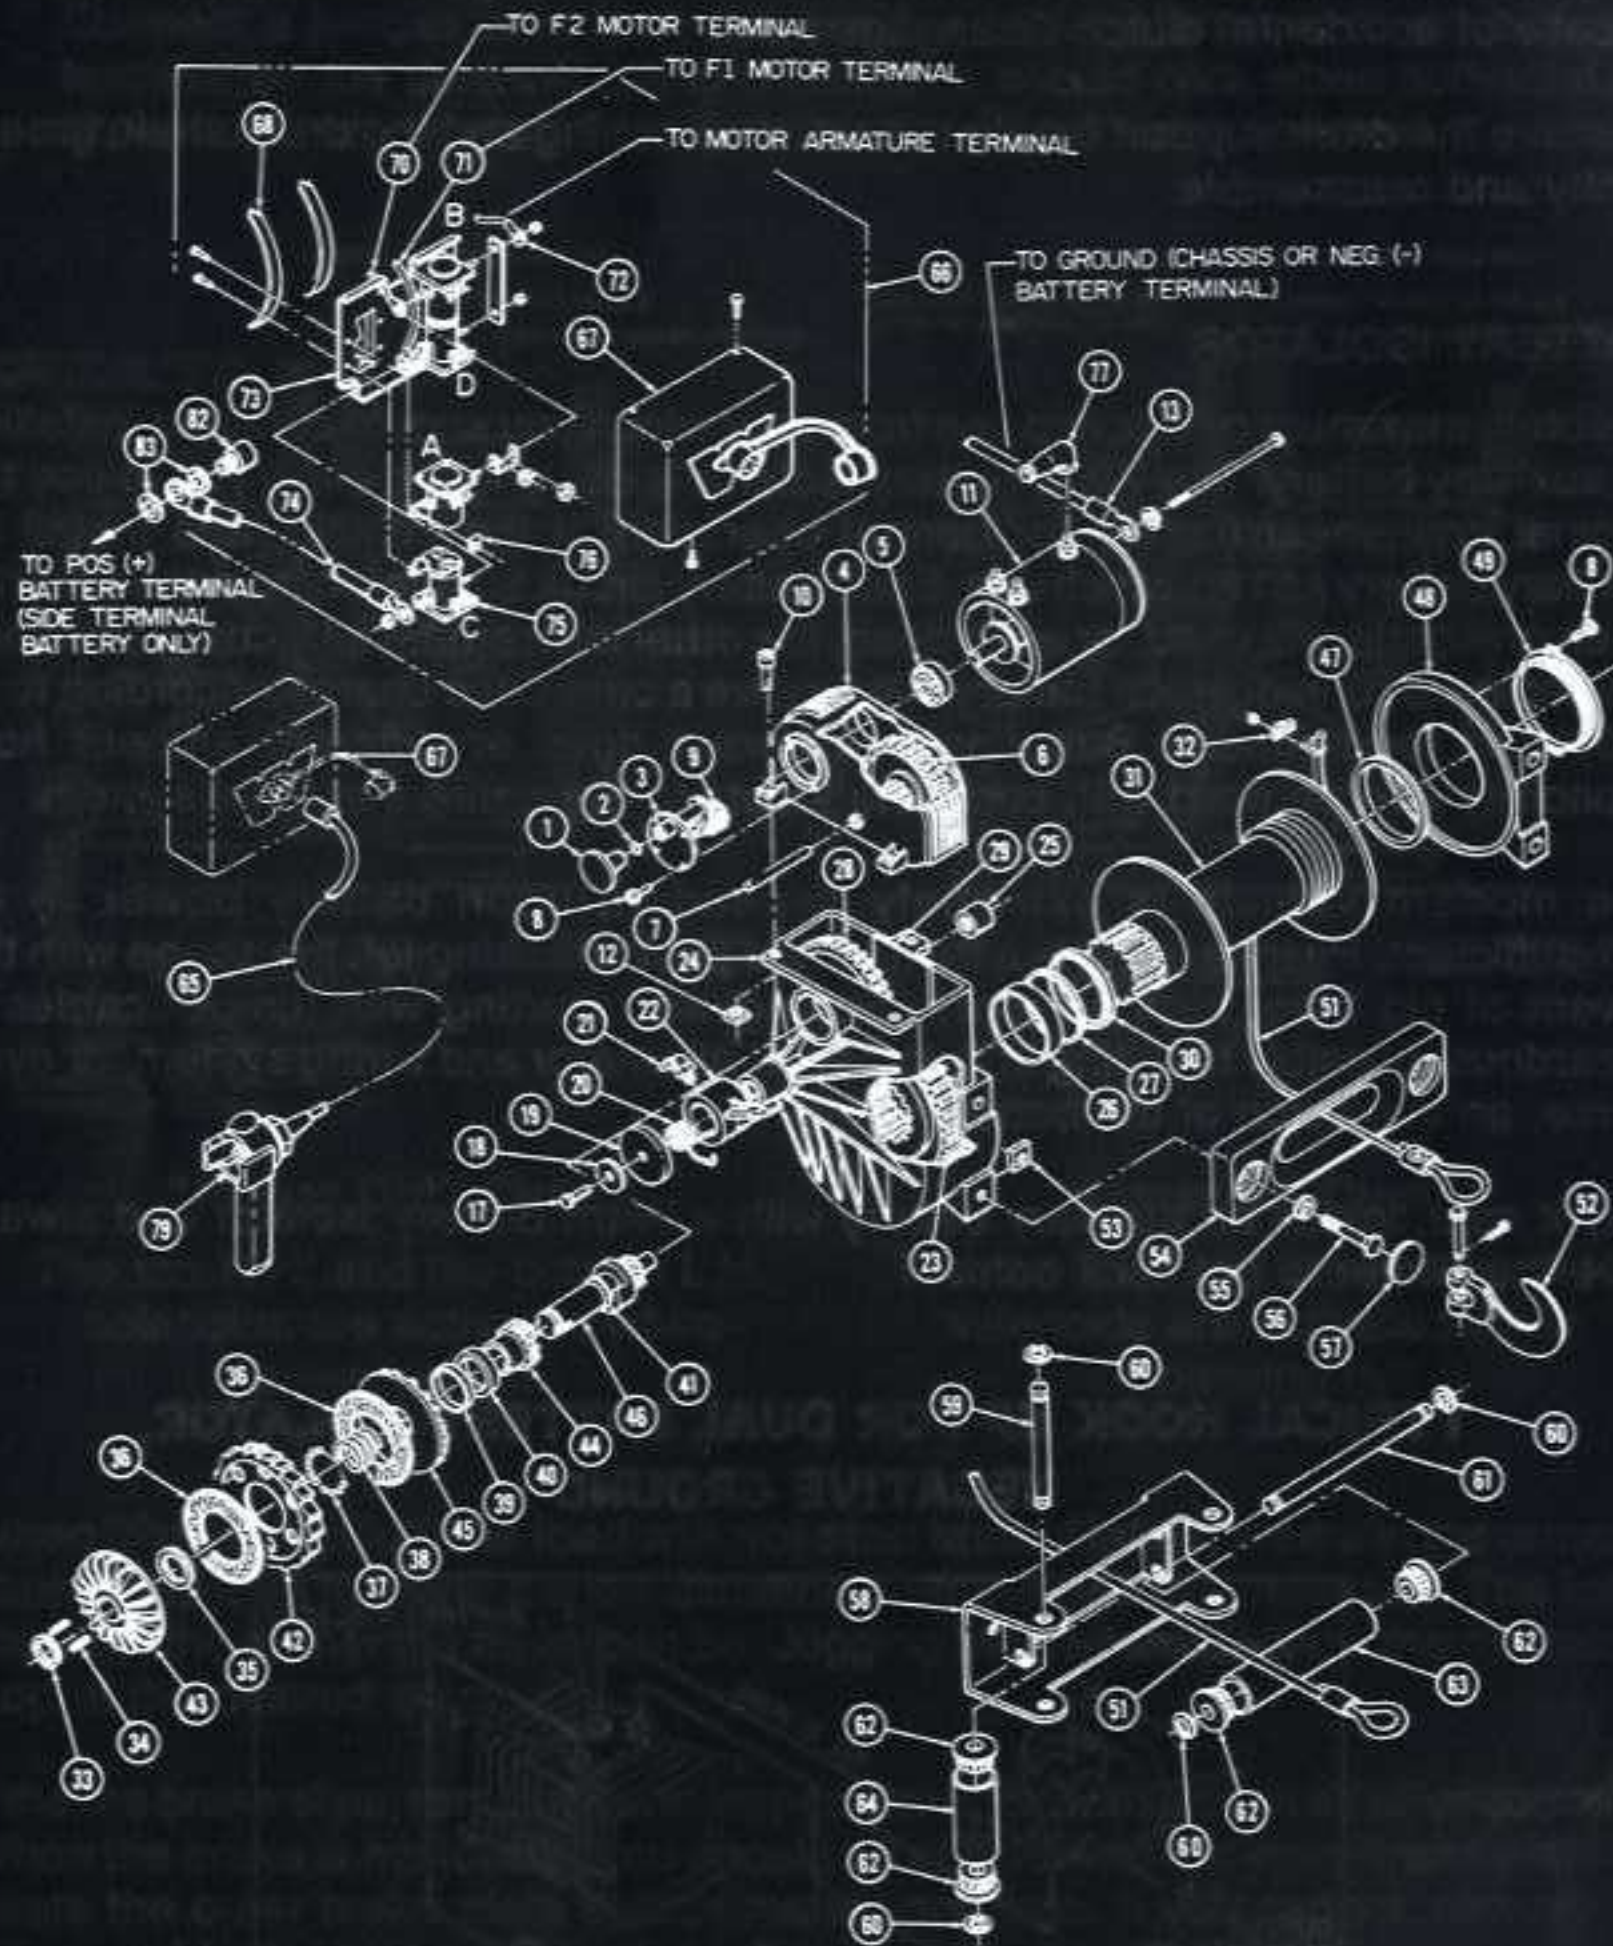

MODEL M8274 REPLACEMENT PARTS LIST

ORDERING INFORMATION

When ordering please give Winch Model & Serial Number Battery voltage
Parts maybe obtained through your local dealer or distributor.

Key No.	Qty.	Part No.	Description	Key No.	Qty.	Part No.	Description	
			UPPER HOUSING ASSEMBLY PARTS			7634	BRAKE SHAFT ASSEMBLY, Includes:	
		8326	CLUTCH ASSEMBLY, Includes:		1	8409	Service Kit, Brake	
1	1	8328	Shift Knob	43	1	8703	Brake, Outer Disc	
2	1	NSS	Seal	42	1	7601	Ratchet	
3	1	NSS	Shifter Assembly	45	1	7600	Brake, Inner Disc	
		9285	UPPER HOUSING SUB ASSEMBLY	46	1	13657	Pinion and Cam	
4	1	NSS	Upper Housing	44	1	9879	Cam, Splined	
5	1	8316	Bearing			7532	END SUPPORT ASSEMBLY, Includes:	
6	1	NSS	Gear, Cluster w/spacer	47	1	NSS	Bushings	
7	1	NSS	Shaft, Cluster Gear	48	1	NSS	Support, End	
8	4	NA	Screw, Tapping 10-24 x 3/8	49	1	7582	Cap, End	
9	1	15879	Pinion, Motor	8	2	NSS	Screw, Tapping 10-24 x 3/8	
10	3	NA	Capscrew, 5/16-18 x 3/4	51	1	2601	WIRE ROPE ASSEMBLY, Includes Hook	
11	1	7536	Motor, Electric — 12VDC	52	1	5320	Hook	
		8803	Motor Electric — 24VDC Includes mounting bolts			8682	FAIRLEAD ASSEMBLY, Hawse Type, Includes:	
12	3	NA	Nut, square, 5/16-18	53	2	NA	Nut, Square	
13	1	6055	Cable, Ground 48"	54	1	NSS	Fairlead	
			LOWER HOUSING ASSEMBLY, Includes:	55	2	NA	Lockwasher	
		7605	Pawl Assembly Includes:	56	2	NA	Capscrew	
17	1	NSS	Cpscr, 1/4-20 x 1/2	57	2	NA	Plug, Soft	
18	1	NSS	Washer			5742	FAIRLEAD ASSEMBLY, Roller Type, Includes:	
19	1	NSS	Cap, Protective	58	1	5741	Bracket, Fairlead	
20	1	NSS	Spring, Pawl	59	2	5744	Shaft, Vertical	
21	1	NSS	Fitting, Grease	60	8	6126	Ring, Retaining	
22	1	NSS	Pawl	61	2	5745	Shaft, Horizontal	
		7594	LOWER HOUSING Sub Assembly Includes:	62	8	2050	Bushing	
24	1	NSS	Lower Housing	63	2	2049	Roller, Horizontal	
25	1	8356	Bearing	64	2	2051	Roller, Vertical	
26	1	NSS	Bushing - See service kit, lower housing	65	1	13330	REMOTE CONTROL ASSEMBLY	
			Seal - See service kit, lower housing	66	1	13334	CONTROL WINCH, 12VDC, Includes	
27	1	NSS				13343	CONTROL WINCH, 24VDC, Includes	
28	1	7548	Gear, Intermediate	67	1	8744	Housing, Solenoid Cluster	
29	1	7552	Plate, Retaining			13329	Solenoid Housing Assembly w/socket	
		8680	SERVICE KIT, Lower Housing, Includes:	68	2	6005	Clamp	
30	1	NSS	Washer, Thrust	70	1	6009	Cable, Electric 7 1/2"	
26	1	NSS	Bushing	71	1	6008	Cable, Electric 6 1/2"	
27	1	NSS	Seal	72	1	6007	Cable, Electric 5 1/2"	
47	1	NSS	Bushing	73	1	6004	Plate, Solenoid Mounting 12VDC	
31	1	7708	Drum, Wire Rope			6347	Plate, Solenoid Mounting 24VDC	
32	1	2048	Clamp, Wire Rope	74	1	2042	Cable, Battery 54"	
23	1	7550	Gear, Main	75	4	2040	Solenoid, 12VDC	
		8678	SERVICE KIT, Brake			2	6341	Solenoid, 24VDC (Bottom Solenoids)
			Winch Serial No. 46945 and Prior.			2	2040	Solenoid, 24VDC (Top Solenoids)
		8409	SERVICE KIT, Brake	76	10	8762	Fastener	
			Winch Serial No. 46946 and later.	77	3	2090	Nipple, Electric Terminal	
33	1	NSS	Ring, Retaining	79	1	8813	REMOTE CONTROL SWITCH	
34	2	NSS	Key, Parallel	82	1	5935	Adapter, Battery Cable	
35	1	NSS	Hub, Disc Brake	83	2	NSS	Lockwasher, 3/8"	
36	6	NSS	Friction Material			1	9167	Bushing Installation Tool
37	21	NSS	Ball, Steel			1	9194	Brake Clamp Assembly
38	1	NSS	Spring, Compression			1	9196	Seal Installation Tool
39	1	NSS	Seal, Lip					
40	1	NSS	Bushing					
41	1	NSS	Seal, O-Ring					

NA= Not Available
NSS= Not Sold Separately