



SHOWING MIXER USED ON 2½ H. P. AND 4 H. P.  
MODEL G

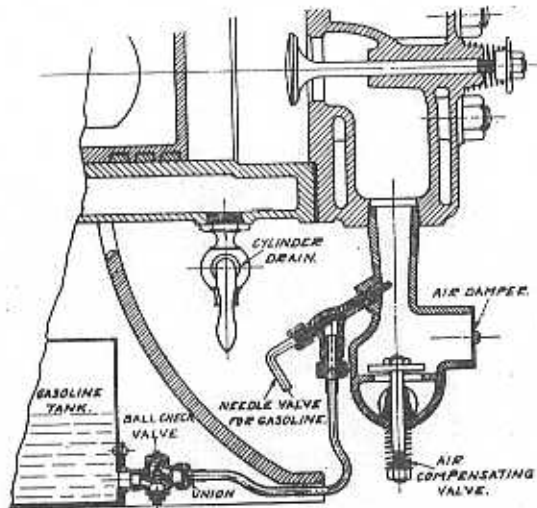

GOVERNOR DETAIL FOR MODEL G 1913 ENGINE

*Speed-control Lever. Lowering increases speed. Raising it decreases speed.*

*"Time-Spark" Lever shown retarded. Pull it to the right after starting engine.*

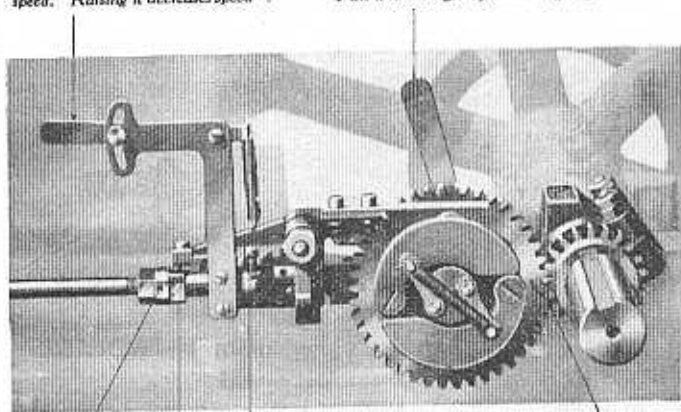

*Detent Block. Can be turned, using 4 sides. Be sure to have flat surfaces of block and detent parallel with each other.*

*Detent Hook. Space between hook & block to be 1.64"*

*Adjustment Screws for Detent Hook*

*Gears are marked "O" and must mesh as shown.*

**NOTE:**

*Oil all moving parts of governor each time before starting engine*